

- Standard Scaffold Poles.
- Heavy guage 2m tall galvanised tube and welded mesh infill panels.
- Panels secured to uprights and cross members with wire ties.
- Uprights driven into the ground until secure (minimum depth o.6m)
- Standard scaffold clamps

# Grain Store: Demolition to take place outside of bird nesting season which is considered to be March to August. Trees: Removal to take place outside of bird nesting season which is considered to be March to August. Hedge: Removal to take place outside of bird nesting season which is considered to be March to August. Scrub: Removal to take place outside of bird nesting season which is considered to be March to August. If any of the above works are required to take place during the bird nesting season, a nesting bird check should be carried out by a competent person. Measures for protection of bats are addressed through the Natural England Bat Mitigation Liscence

## NOTE:

No Ground Clearance, Demolition or construction work shall commence place on any phase until the contractor can demonstrate that the following tree protection measures are in place:


Throughout the site during the construction phase, the root protection areas of trees should be preserved undisturbed. This can be achieved by designating 'construction exclusion zones' and protecting them with tree protection fencing.

Tree protection barriers as detailed shall be installed in the locations indicated and shall be retained on site for the duration of the construction works. Allowance should be made for inspection by a local authority tree officer who may wish to visit.

No works shall take place within the construction exclusion zones, nor should they be used for storage of materials or disposal of spoil. No fires should be allowed within the construction exclusion zones and care should be excercised that no spillage or seepage of chemicals impacts upon them.

Should it become necessary to access construction exclusion zones, the barriers can be temporarily repositioned, but should be  $replaced. \ If vehicles are used, a \ means to \ spread the load \ should \ also \ be \ employed \ to \ avoid \ compaction \ of \ the \ soil. \ Where \ root$ protection areas extend under existing hard surfaces, for example where they extend to the public highway, it is not absolutely necessary to prevent access, but care should be taken not to subject these surface to loads greater than they would originally have

A method statement should be prepared by the contractor to demonstrate that works shall be achieved protecting access to the construction exclusion zones as shown in the drawing. Reference should be made to British Standard 5837 'Trees in Relation to Design, Demolition and Construction' and should also ensure to cover site management considerations such as access by vehicles and machinery, storage of materials and location of site office, welfare and other facilities.

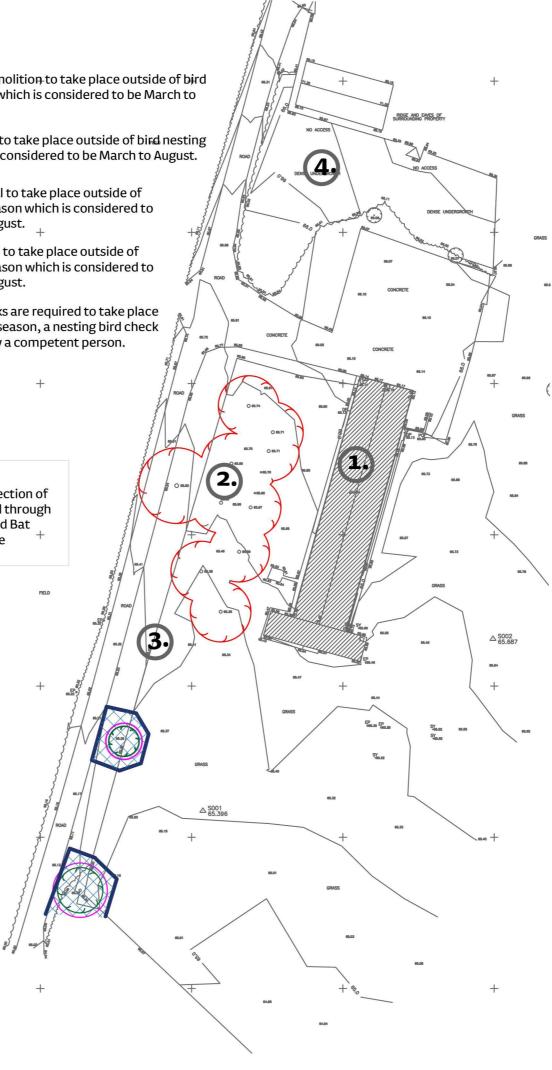



# Landscape Architecture Ecology | Greenspace

Red Kite Network Limited. The Old Church Tel 01952 582111 | info@redkitenetwork.co.uk www.redkitenetwork.co.uk





Planning Reference-204024 This drawing provides information to discharge planning condition 5 requiring a **Construction Environment** Management Plan and condition 6 requiring tree protection measures.

#### KEY:



Retained Trees with Root Protection Area



Trees to be removed



Construction Exclusion Zone



posed barrier fencing line

**ELL Developments LTD** 

## Byford Common Grain Store

DRAWING:	C.E.M.P. Trees and Ecology
NUMBER:	466.21.04
DATE:	January 2022
STATUS:	Planning
DRAWN:	јв
CHECKED:	NH

#### Scale 1:500@A3

