


First floor (upper loft area)

lesser horseshoe bat entrance slot
600mm wide x300-400mm high with
cover over the entrance

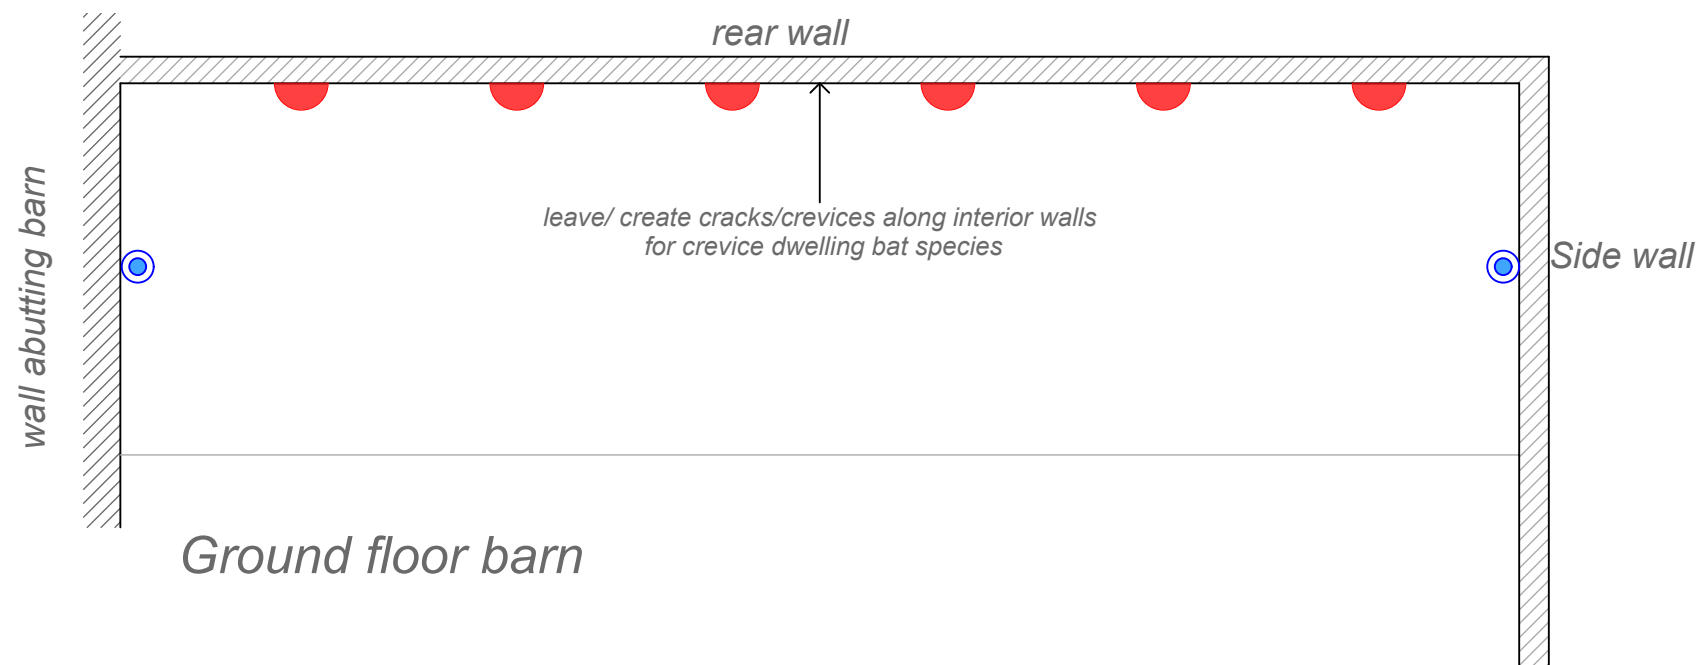

Ground floor barn

- Bat roosting box located at high level on interior walls
- Artificial Swallow nest
- ⊗ 20x20mm bat access gap under ridge tile
- Bat access tile to loft void

General Notes:
Type 1 bituminous felt to be used and untreated roof timber used in construction of Bat lofts.
Floors, walls and soffit of Bat lofts shall be insulated and boarded



-3. Bat loft 1:500

-3. Bat loft 1:100