


1. Bubble stone making
 2. Timber weatherboarding
 3. Natural stone roofing
 4. Roof glazing
 5. Timber glazed door
 6. Oak post
 7. Timber framed glazing
 8. Portland window
 9. Glazing behind timber frame
 10. Timber boarded door
 11. Bat screen point under ridge
 12. Bat screen point through slate
 13. Bat screen point under eaves
 14. Bat screen point through weatherboarding
- (link to English Nature details)

NW09/1960/F -

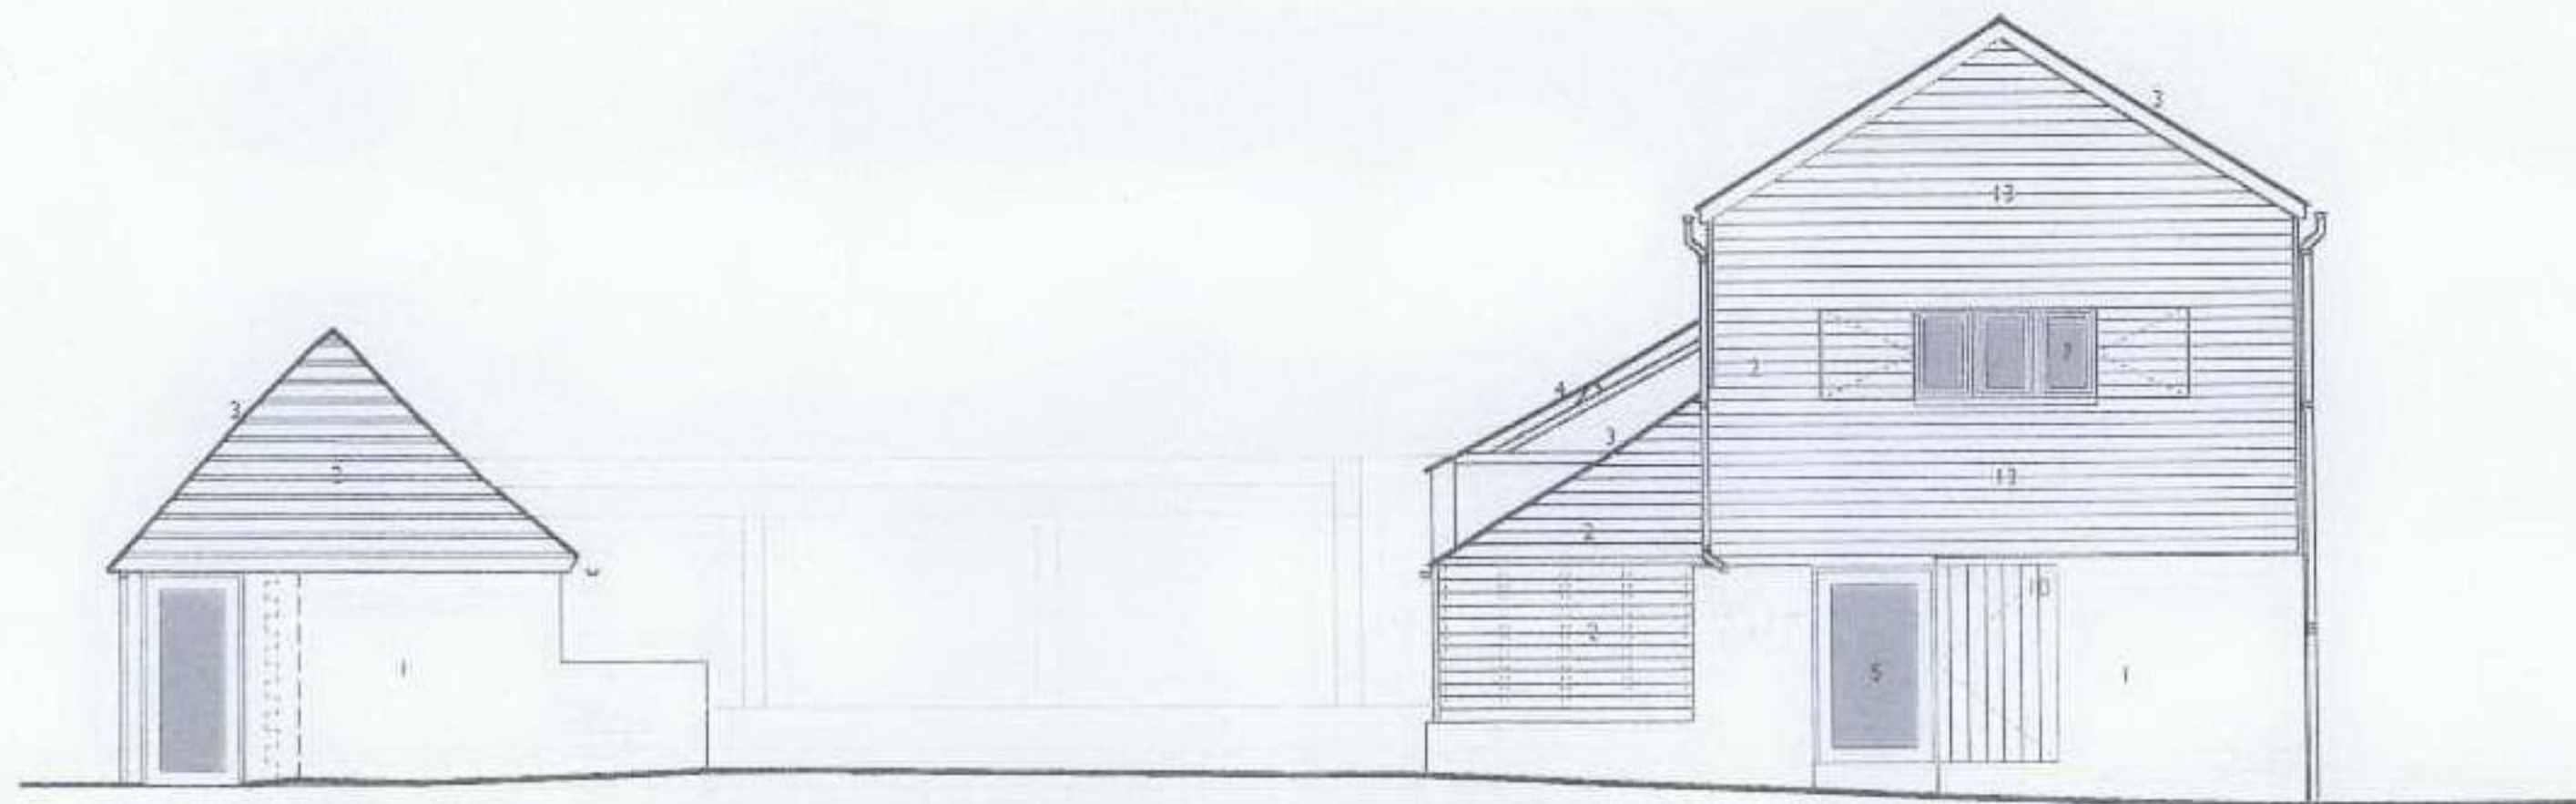

SOUTH-EAST ELEVATION

— 256L 1000

P15

